Lonsdor K518ISE Hibernation Function update instruction

Updated Device: Lonsdor K518ise

Updated Condition: for all K518 devices with working normally Updated Content: Added Hibernation function; Kernel update supported Updated Version: K518 APK V1.5.25

Preparation for Update:

- 1. Power on the device or keep the battery level over 80%.
- 2. Make sure wifi network is in good condition and the device receives signal normally;

Update steps:

1. Click [One key update] and skip to below interface. Then click the first button to update system. When the update complete, click [OK] to reboot the device.



^{78%} 奈 ≠0.0V		
	ower on the device or keep the battery level over 80% eep wifi network in good condition	
One key update new	: Check current program version, update if click here	0
One key update	:Update APK	0
Force to update device data, wh circumstances,	: It will take more time to force updating all ich runs certain risks. Under normal please use with caution.	0



2. After rebooting, click and enter [Settings] menu, you will find there are two additional function buttons: [Update Kernel] and [Display Settings].



3. Click [Update Kernel] first and skip to below interface, then press [Update] to update the kernel.





4. Click [Install] after updating the kernel file. And the device will reboot to install kernel.

40% II	≈ +0.0 γ			
	Succeed to copy, please click"Install"			
	Before installation, make sure the power is over 50% or there is an external power supply, during installation, it may flash screen or blank screen for 5 to 10 times, the installation may last long, please be patient, do not force to shut down.			
	Install			

5. Blank screen is normal during the installation. The whole process will take 5 minutes, be patient to wait and don't restart the device manually.





6. The update complete when the password input interface appears. Screen auto-lock in the [Display Settings] is added.

Please enter password									
$\textcircled{\begin{tabular}{lllllllllllllllllllllllllllllllllll$									
1	2	3	4	5	Delete				
6	7	8	9	0	Forgot password				

7. Enter [Settings] \rightarrow [Display Settings] to adjust the screen brightness and screen auto-locking time .

<u>چَ</u>		Display settings			
	Brightness		This function ad updating the ke	ded after rnel	
	Auto off screen 3 minutes	time ①10 minutes	⊖30 minutes	Never	

8. The benefits for update: Save power to prolong stand-by time. Auto standby function can prevent the device from being overheated in hot summer.

http://www.lonsdork518.com